AMERICAN WELDQUIP

SERVICE QUALITY SOLUTIONS

Air-Cooled Smoke Extraction Semi-Automatic MIG Torches

For Models

347SM, 354SM, 407SM 500SM and 507SM

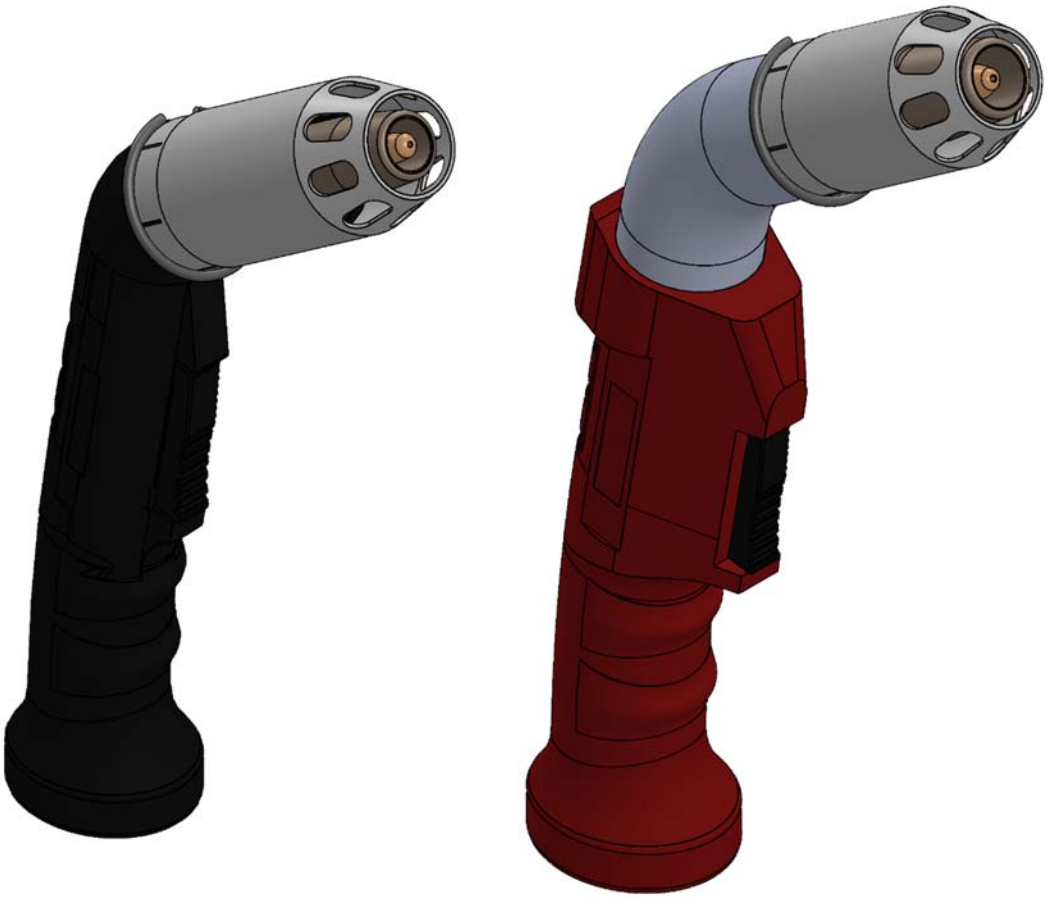

This Product is
MADE IN THE U.S.A.

INSTALLATION, OPERATIONS, AND REPLACEMENT PARTS MANUAL

SERVICE QUALITY SOLUTIONS

TABLE OF CONTENTS

INTRODUCTION 2
WARRANTY 2
ROHS COMPLIANT 3
SAFETY PRECAUTIONS – READ BEFORE USING 4
FEATURES 9
TORCH SPECIFICATIONS 9
INSTALLATION 9
EURO CONNECTION (USING FEEDER ADAPTOR KIT) 9
DIRECT CONNECT 9
DAILY MAINTENANCE 10
MAINTENANCE 10
LINER REPLACEMENT 10
GOOSENECK REPLACEMENT 11
TRIGGER MICRO-SWITCH REPLACEMENT 12
POWER CABLE REPLACEMENT 13
NOZZLE/TIP RELATIONSHIPS 14
NOZZLE SELECTION CHART 15
300 SERIES NOZZLES 15
400 SERIES NOZZLES 15
500 SERIES NOZZLES 16
CONTACT TIP SELECTION CHART 16
M6 CONTACT TIPS 16
M8 CONTACT TIPS 16
LINER SELECTION CHART 17
PARTS BREAKDOWN 18
APPENDIX 21
A-1 EURO FEEDER PIN 21
NOTES 22

INTRODUCTION

Thank you for purchasing an AMERICAN WELDQUIP product. The AMERICAN WELDQUIP product you have purchased has been carefully manufactured, assembled, and fully tested. This manual contains information on the installation, operation, maintenance, and replacement part breakdown. Please read, understand, and follow all safety instructions, warnings, and procedures. Keep this manual handy for referencing installation, operation, maintenance, and part ordering information. While every precaution has been taken as to the accuracy in this manual, AMERICAN WELDQUIP assumes no responsibility for errors or omissions. AMERICAN WELDQUIP assumes no liability for damages resulting from the use of the information contained in this manual. AMERICAN WELDQUIP shall have no liability to the buyer for consequential damages or expenses by any defect whatsoever.

WARRANTY

AMERICAN WELDQUIP MIG guns and parts are warranted to be free of defects in material and/or workmanship for the period listed below. For any product found to be defective under normal use, AMERICAN WELDQUIP at our option, will repair, replace, or issue a credit for the value of the defective product. All warranty claims must be submitted by the original purchaser. Use of non-genuine AMERICAN WELDQUIP parts and/or consumables may damage and/or severely limit the performance of the equipment which may limit or void any warranties. AMERICAN WELDQUIP not assume responsibility for incidental damages or expenses related to any defect. This warranty does not cover damage caused by misuse or abuse, accident, alteration of product, improper installation, misapplication, lack of reasonable care and maintenance, unauthorized repairs or modifications, loss of use while at a repair facility or other conditions that are beyond the control of AMERICAN WELDQUIP.

A Return Merchandise Authorization Number (RMA#) must be attained from the factory for any product being returned for Warranty Repair or Replacement. All returned products must be shipped freight prepaid by the sender. No-charge replacements, repaired products, or credit will be issued once the returned product has been evaluated and warranty condition has been verified. If an immediate replacement is required before proper warranty evaluation, a purchase order number is required, and the goods will be invoiced. A credit will be issued once it is determined that a warranty condition exists.

STANDARD WARRANTY

All Semi-Automatic, Automatic, Robotic MIG Torches and Components…….= 120 Days

MIG Torch Trigger Switches (Contacts only) - Excludes Smoke Extraction……= LIFETIME

Robotic Nozzle Cleaning Stations, Wire Cutter……= 6 Months

Robotic Peripherals, ArcSafe, Gun Mounts…….= 90 Days

TIG POINT Tungsten Electrode Grinders……= 90 Days

LIMITED EXTENDED WARRANTY PROTECTION

This limited extended warranty protection expands coverage to loyal customers who use all GENUINE AMERICAN WELDQUIP consumables. Customers filing a claim under the extended warranty will need to prove, by providing past invoices, that they have been purchasing and using Genuine AMERICAN WELDQUIP consumables.

All Semi-Automatic, Automatic, Robotic MIG Torches and Components…….= 1 YEAR

MIG Torch Trigger Switches (Contacts only) -Excludes Smoke Extraction……....= LIFETIME

MIG Torch Handles……..…= LIFETIME

Robotic Nozzle Cleaning Stations, Wire Cutter……..…= 1 Year w/Exclusive Quip-Mist Use

Robotic Peripherals, ArcSafe, Gun Mounts…….……..= 90 Days

TIG POINT Tungsten Electrode Grinders……= 90 Days

ROHS COMPLIANT

RoHS (Restriction of Hazardous Substances) is an environmental law which addresses the European Union directive 2002/95/EC known as the RoHS Directive. The RoHS directive restricts the use of hazardous substances listed below in electrical and electronic equipment. While it is not a requirement to meet the directive in the United States, currently, AMERICAN WELDQUIP INC. feels this is an important part of our "Go Green initiative. We have taken all reasonable steps to try to ensure the supporting evidence regarding the absence of the restricted substances to support RoHS compliance.

For reference, the maximum concentration values of the restricted substances by weight in homogenous materials are:

Lead/Lead Components……-0.1%

Mercury……-0.1%

Hexavalent Chromium……-0.1%

Polybrominated Biphenyls (PBBs)……-0.1%

Polybrominated Diphenyl Ethers (PBDEs)……-0.1%

Cadmium……-0.01%

For RoHS Certification of Compliance Letter on a particular product please visit our website – www.weldquip.com or email us at technical@weldquip.com or call 330-239-0317.

SAFETY PRECAUTIONS – READ BEFORE USING

Before installing, operating, or performing maintenance please read the safety precautions below. Failure to observe safety precautions can result in injury or death.

Read and follow the Owner's Manual carefully before installing, operating, or servicing equipment. Read and understand all the safety information.

CALIFORNIA PROPOSITION 65 WARNINGS

This product, when used for welding and cutting, can produce fumes or gases which contain chemicals known to cause birth defects and cancer. (California Health & Safety Code Section 25249.5 et seq.) **WASH HANDS AFTER HANDLING**

EMF – ELECTRICAL AND MAGNETIC FIELDS MAY BE DANGEROUS

Electrical current flowing through any conductor causes localized Electric and Magnetic Fields (EMF). Welding current creates an EMF field around welding cables and welding machines.

WARNING - EMF fields may interfere with some pacemakers and other medical implants. Implanted medical device wearers should consult their doctor before operating or going near any arc welding applications. In addition, exposure to EMF fields in welding may have other unknown health effects.

- Welders should use the procedures below to minimize the exposure to EMF fields from the welding circuit.
- Route the cables close together. Secure by twisting, taping, or using a cable cover to keep together.
- Never coil, wrap, or drape welding cables around your body.
- Do not place your body between welding cables. Arrange it so that cables are on one side and away from the operator.
- Connect the work clamp (ground) to the workpiece as close as possible to the area to be welded.
- Do not sit, lean, or stand next to the welding power source.
- Do not breathe the fumes and gases as they can cause asphyxiation.

FUMES AND GASES CAN BE DANGEROUS

WARNING - WELDING AND CUTTING PRODUCE FUMES AND GASES THAT ARE HAZARDOUS TO YOUR HEALTH

Fumes and gases generated from welding can cause severe injury to respiratory system and even death. In poorly vented areas it is required to properly ventilate the area and/or use local forced ventilation or other fume control equipment at the arc to remove welding and cutting fumes and gases.

The recommended way to determine adequate ventilation is to sample the composition and quantity of fumes and gases to which personnel are exposed. The worker exposer level should be checked initially and periodically thereafter to maintain applicable OSHA PEL and ACGIH TVL limits.

- In a poorly ventilated area, it is necessary to wear an approved air-supplied respirator.

- Always read and understand the Safety Data Sheets (SDSs) and the manufacturer's instructions for adhesives, coatings, cleaners, consumables, coolants, degreasers, fluxes, and metals.
- Always have a trained watchperson nearby. Welding and cutting fumes and gases can displace air and lower the oxygen level causing injury or death. Be sure the breathing air is safe.
- Do not weld or cut in locations near degreasing, cleaning, or spraying operations. The heat and rays of the arc can react with vapors to form highly toxic and irritating gases.
- Do not weld or cut on coated metals, such as galvanized, lead, or cadmium plated steel, unless the coating is removed from the weld area, the area is well ventilated, and while wearing an air-supplied respirator. The coatings and any metals containing these elements can give off toxic fumes if welded.

ELECTRIC SHOCK CAN KILL

WARNING - ELECTRICAL SHOCK CAN KILL. DO NOT TOUCH LIVE ELECTRICAL PARTS AND/OR USE IN DAMP LOCATIONS.

The electrode and work (ground) circuit are electrically "HOT" whenever the welding equipment is on. Do not touch these electrically live parts with your bare skin or wet/damp clothing. Wear dry, hole-free gloves. Incorrectly installed or improperly grounded equipment is a hazard.

Insulate yourself from work and the ground using dry insulating mats or covers big enough to prevent any physical contact with the work or ground.

Additional safety precautions are required when any of the following electrically hazardous conditions are present: in damp locations or while wearing wet clothing; on metal structures such as floors, gratings, or scaffolds; when in cramped positions such as sitting, kneeling, or lying; or when there is a high risk of unavoidable or accidental contact with the workpiece or ground. For these conditions, use the following equipment in order presented: 1) a semi-automatic DC constant voltage, 2) a DC manual (stick) welder or 3) an AC welder with reduced open-circuit voltage. In most situations, use of a DC constant voltage wire welder is recommended and do not work alone!

- Disconnect input power or stop engine before installing or servicing this equipment. Lockout/tag out input power according to OSHA 29 CFR 1910.147 (see Safety Standards).
- Properly install ground and operate this equipment according to its Owner's Manual and national, state/provincial, and local codes.
- Always verify the suppl ground. Make sure that input power cord ground wire is properly connected to ground terminal in disconnect box or that cord plug is connected to a properly grounded receptacle outlet.
- Keep cords dry, free of oil and grease and protected from hot metal and sparks.
- Frequently inspect input power cord for damage or bare wiring. Replace the cord immediately if damaged. Bare wiring can kill.
- Turn off all equipment when not in use.
- Do not use worn, damaged, undersized, or poorly spliced cables. It is illegal to use electrical tape to repair torch power cable or ground cable that has damaged outer insulation. The cable must be replaced.
- Do not drape cables over your body.

- Do not touch the electrode if you are in contact with the work, ground, or another electrode from a different machine.
- Do not touch electrode holders connected to two welding machines at the same time since double open circuit voltage will be present.
- Use only well-maintained equipment. Repair or replace damaged parts at once. Maintain unit according to manual.
- Wear a safety harness if working above floor level.
- Keep all panels and covers securely in place.
- Clamp work cable with good metal-to-metal contact to workpiece or worktable as near the weld as practical.
- Do not connect more than one electrode or work cable to any single weld output terminal. Disconnect cable when not in use.

ARC RAYS HAZARDS

WARNING – A WELDING ARC EMITS ULTRAVIOLET (UV) AND OTHER RADIATION AND CAN CAUSE SERIOUS INJURY TO UNPROTECTED SKIN AND EYES.

Use a shield with the proper filter and cover plates to protect your eyes from sparks and the rays of the arc when welding or observing open arc welding. The headshield and filter lens should conform to ANSI Z87. I standards.

Use suitable clothing made from durable flame-resistant material to protect your skin and that of your helpers from the arc rays.

Protect other nearby personnel with suitable, non-flammable screening and/or warn them not to watch the arc nor expose themselves to the arc rays or to hot spatter or metal.

WELDING AND CUTTING CAN CAUSE FIRE OR EXPLOSION

WARNING – Welding and cutting produces sparks that fly off from the arc and can cause fires and/or explosions.

- Welding or cutting on closed containers, such as tanks, drums or pipes can cause them to blow up. Sparks can fly off from the welding or cutting arc. Flying sparks, hot work pieces and hot equipment can cause fires and burns.
- Accidental contact of electrode to metal objects can cause sparks, explosions, overheating or fire. Check and be sure the area is safe before doing any welding or cutting.
- Do not weld or cut where flying sparks can strike flammable material.
- Remove all flammables and fire hazards from the welding area. If this is not possible, tightly cover them with approved covers to prevent the welding sparks from starting a fire.
- When not welding, make certain no part of the electrode circuit is touching the work or ground. Accidental contact can cause overheating and create a fire hazard.
- Be alert that welding sparks and hot materials from welding and cutting can easily go through small cracks and openings and cause a fire in the adjacent areas.

Follow requirements in OSHA 1910.252 (a) (2) (iv) and NFPA 51B for hot work and have a fire watcher and extinguisher nearby.

- Do not heat, cut, or weld tanks, drums or containers that have held combustibles until the proper steps have been taken to ensure that such procedures will not cause flammable or toxic vapors from substances inside. They can cause an explosion even though they have been “cleaned”. For information, purchase “Recommended Safe Practices for the Preparation for Welding and Cutting of Containers and Piping That Have Held Hazardous Substances”, AWS F4.1 from the American Welding Society.
- Do not weld or cut where the atmosphere may contain flammable dust, gas, or liquid vapors (such as gasoline).
- Sparks and spatter are thrown from the welding arc. Wear oil free protective garments such as leather gloves, heavy shirt, cuff-less trousers, high shoes, and a cap over your hair. Wear ear plugs when welding out of position or in confined places. Always wear safety glasses with side shields when in a welding area.
- Connect work cable to the work as close to the welding or cutting area as practical to prevent welding or cutting current from traveling long, possibly unknown paths and causing electric shock, sparks, and fire hazards.
- Do not use the welder to thaw frozen pipes.
- Remove any combustibles, such as a butane lighter or matches, from your person before doing any welding or cutting.
- Inspect the area to ensure it is free of sparks, glowing embers, and flames after work is complete.

CYLINDERS CAN EXPLODE IF DAMAGED

WARNING – Compressed gas cylinders contain gas under high pressure and/or flammable gas. If damaged, the cylinder can explode.

- Use only compressed gas cylinders containing the correct shielding gas for the process used and properly operating regulators designed for the gas and pressure used. All hoses, fittings, etc. should be suitable for the application and maintained in good condition.
- Always keep cylinders in an upright position securely chained to an undercarriage or fixed support.
- Cylinders should be located away from areas where they may be struck or subjected to physical damage and a safe distance from arc welding or cutting operations and any other source of heat, sparks, or flame.
- Never allow the electrode, electrode holder or any other electrically “hot” parts to touch a cylinder.
- Keep your head and face away from the cylinder valve outlet when opening the cylinder valve.
- Valve protection caps should always be in place and hand tight except when the cylinder is in use or connected for use.
- Read and follow the instructions on compressed gas cylinders, associated equipment, and CGA publication P-l, “Precautions for Safe Handling of Compressed Gases in Cylinders,” available from the Compressed Gas Association, 14501 George Carter Way Chantilly, VA 20151.

PRINCIPAL SAFETY STANDARDS

- *Safety in Welding, Cutting and Allied Processes, ANSI Standard Z49.1 – available for download from the American Welding Society website at* www.aws.org.
- *CSA Standard W117.2 – available from Canadian Standards Association, Standards Sales, 5060 Spectrum Way, Suite 100, Ontario, Canada L4W 5NS or website –* www.csa-international.org.
- *Nation Electric Code, NFPA Standard 70 – available from National Fire Protection Association, Quincy, MA 02269, or website –* www.nfpa.org.
- *Safe Practices for Occupational and Educational Eye and Face Protection, ANSI Standard Z87.1 – available from the American National Standards Institute, 25 West 43rd Street, New York, NY 10036. Website –* www.ansi.org.
- *OSHA, Occupational Safety and Health Standard for General Industry, Title 29, Code of Federal Regulations, Part 1910, Subpart Q and Part 1926, Subpart J available from U.S. Government Printing Office, Superintendent of Documents, P.O. Box 371954, Pittsburg, PA 15250. Website –* www.osha.gov.

SMOKE EXTRACTION SEMI-AUTO TORCHES

FEATURES

AMERICAN WELDQUIP torches have been designed with advanced features and benefits to include:

Durability – Heavy-walled gooseneck design gives increased durability where it matters the most.

Consumables – Common consumable platform keeps stock needs down.

Power Cable – A strong, durable power cable promotes clean arc starts and cut resistance.

Adaptation – Adaptable to most wire feeders with quick change control cable.

Location – Manufactured in Sharon Center, Ohio allowing for quick turnaround.

TORCH SPECIFICATIONS

MODEL	RATED AMPERAGE	100% Duty Cycle		60% Duty Cycle	
		CO2	Mixed Gas	CO2	Mixed Gas
347SM	300	325A	275A	350A	325A
407SM	400	400A	325A	450A	400A
500SM	500	500A	400A	575A	500A

Duty Cycle is based on a complete cycle time of 10 minutes. (60% Duty Cycle = 6 minutes weld time, 4 minutes off time).

INSTALLATION

Depending on how your torch was ordered, your AMERICAN WELDQUIP torch has been supplied with either a EURO type feeder connection or a DIRECT wire feeder connection. The AMERICAN WELDQUIP torch can be installed to the wire feed unit in two ways.

- Euro Connection – Feeder Adaptor Kit may be required
- Direct Connection

EURO CONNECTION (USING FEEDER ADAPTOR KIT)

In some cases, it may be desirable to use a Euro feeder adaptor kit when using different manufactures wire feed units. This will commonize torches to a Euro style configuration.

1) Thread the feeder adaptor plug into the adaptor block and tighten.
2) Insert the adaptor guide tube into the adaptor plug.
3) Fully insert the feeder adaptor assembly into the wire feeder. Tighten screw or other method on wire feeder to secure the adaptor assembly.
4) Connect the Euro torch to the feeder adaptor assembly.
5) Feed welding wire into the torch and tighten drive rolls.

WARNING: WHEN FEEDING WELD WIRE THROUGH THE TORCH, KEEP THE FRONT END OF THE TORCH POINTED AWAY FROM ANY PERSON OR OBJECT. DO NOT POINT AT THE FACE, HANDS ETC. FAILURE TO DO SO WILL RESULT IN BODILY INJURY AND POSSIBLY DEATH.

DIRECT CONNECT

The direct connect torch system is designed for installation to the wire feeder without the need for any adaptor system. The torch is supplied (depending on the torch configuration

ordered) with a feeder connection plug at the rear of the torch, gas connection, feeder control cable.

1) Fully insert the torch Direct Connection into wire feeder. Tighten screw or other method on wire feeder to secure torch.
2) Connect the gas hose if required:
    a. Lincoln Universal- connect PtoC to power pin then hose from PtoC to feeder.
    b. OTC/Daihen, Lincoln, and Panasonic- connect to feeder with attached hose.
3) Connect feeder control cable/plug to the feeder
4) Feed welding wire into the torch and tighten drive rolls.

WARNING: WHEN FEEDING WELD WIRE THROUGHT THE TORCH KEEP THE FRONT END OF THE TORCH POINTED AWAY FROM ANY PERSON OR OBJECT. DO NOT POINT AT THE FACE, HANDS ETC. FAILURE TO DO SO WILL RESULT IN BODILY INJURY AND POSSIBLY DEATH.

DAILY MAINTENANCE

A few minutes per day performing a quick check of your MIG torch will help to decrease weld problems, minimize downtime, and help increase consumable life.

At Beginning of Shift

- Inspect the cable for cuts, nicks, or tears. If you can see bare copper return for maintenance.
- Inspect the front-end consumables. Clean weld spatter and inspect the nozzle insulator. If nozzle insulation is damaged, the nozzle should be replaced.
- Check that the gas diffuser is tight, and the insulating washer is on the gooseneck.
    - The insulating washer is pertinent to have in place as this helps prevent the gooseneck from getting electrically charged.
- Check the gas holes in the diffuser and clean if necessary.
- Check and tighten the contact tip.
- Check all electrical connections including the power cable from the power supply, torch/feeder connections, and control cables for loose connections. Tighten if necessary. Loose connections can cause overheating of cables and/or loss of electrical power.

MAINTENANCE

LINER REPLACEMENT

Warnings – To avoid accidental injury ensure power supply and wire feed unit is turned off.

1. Trim the end of the weld wire at contact tip.
2. Retract or completely remove the weld wire.
3. Remove the torch from the wire feeder.
4. Remove the nozzle, contact tip, and diffuser. Inspect and replace if necessary.
    a. Inspect insulating washer (between diffuser and gooseneck) and replace if necessary.
5. Loosen the set screw, DO NOT REMOVE, on the feeder pin using a 5/64” Allen wrench. If retaining nut, remove and set aside.
6. Making sure the torch cable is straight, grasp the liner at the rear of the torch with a pair of pliers and remove.

7. Carefully feed the new liner into the torch using short strokes to avoid kinking. You may need to twist the liner for easier insertion. Ensure the liner collet is all the way against the power pin.
8. Tighten the set screw or retaining nut to secure the liner in the feeder pin.
9. IMPORTANT: at the front end of the torch push the liner back into the gun and hold.
10. While holding the liner in, trim the liner so that 13/32" (2007 series diffusers) or 11/16" (4033 series diffusers) sticks out from the end of the gooseneck. Check the torch diffuser to determine if AW 02007 or AW 04033 is engraved on it.
11. Gently twist the power cable 180°. Which end you twist from depends on the direction of rotation.

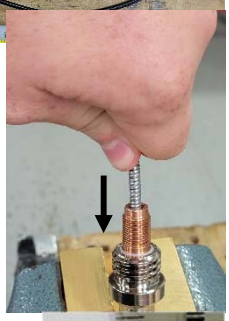

Warning - It is important to keep one end of the power cable stationary while twisting the opposite end.

   a. Holding the neck, twist the cable **counterclockwise**.
   b. Holding from the power pin, twist the **cable clockwise.**

12. Replace the diffuser, contact tip, and nozzle.
13. Untwist the torch.
14. Attach torch to the wire feeder.
15. Feed welding wire into the torch and tighten drive rolls.

WARNING: WHEN FEEDING WELD WIRE THROUGH THE TORCH KEEP THE FRONT END OF THE TORCH POINTED AWAY FROM ANY PERSON OR OBJECT. DO NOT POINT AT THE FACE, HANDS ETC. FAILURE TO DO SO WILL RESULT IN BODILY INJURY AND POSSIBLY DEATH.

GOOSENECK REPLACEMENT

WARNING: to avoid accidental injury ensure power supply and wire feed unit is turned off.

1) Trim the end of the weld wire at contact tip.
2) Retract or completely remove the welded wire so the torch can be removed from the wire feeder.
3) Loosen the set screw at the torch feeder connection using a 5/64" Allen Wrench or remove the torch feeder connection cap.
4) Making sure the torch cable is straight, grasp the liner at the rear of the torch with a pair of pliers and retract into cable assembly.
5) Remove fume nozzle, fume controller, and front-end consumables (i.e. nozzle, contact tip, gas diffuser, and insulating washer).
6) Remove the 5 handle screws and separate the handle assembly. ***CAUTION: Trigger spring is under compression and can be easily lost.***
7) Remove aluminum outer neck tube (354 to 507 models only).
8) Secure gooseneck in a vice.
9) Using a wrench, loosen the gooseneck and remove from the cable assembly.
10) Thread the new gooseneck on to the cable assembly and tighten.
11) Reassemble the two handle sides onto the gooseneck/cable assembly. Be sure to watch for the following they all must be aligned for handle to be assembled correctly.

a. Align neck wings with grooves in handle body.
b. Align trigger assembly (this includes trigger, micro-switch with pins, and spring) in place into their mating sockets. ***IMPORTANT: Ensure the trigger wires are directed correctly to avoid pinching of wires.***
c. At the rear of the handle align exhaust hose coupler with mating grooves.
d. At the front of the handle align aluminum outer neck tube with mating pins in handle (354 to 507 models only).

12) Reinstall 5 handle screws. ***IMPORTANT: Ensure the trigger wires are not pinched between the handle halves.***
13) Carefully feed the liner back into the torch using short strokes to avoid kinking. You may need to twist the liner for easier insertion.
14) Tighten the set screw to secure the liner in the torch or replace the cap on the torch feeder connection.
15) Reinstall the torch to the wire feed unit.
16) Reinstall the consumables as well as the fume nozzle, and fume controller.
17) Feed welding wire into the torch and tighten drive rolls.

TRIGGER MICRO-SWITCH REPLACEMENT

WARNING: To avoid accidental injury, ensure power supply and wire feed unit is turned off.

Trigger switch Assembly consists of:

1ea. Trigger Paddle

1ea. Spring

1ea. Micro-Switch with wires

1) Remove fume nozzle and fume controller from the torch assembly.
2) Remove the five handle screws and separate the handle assembly. ***CAUTION: Trigger spring is under compression and can be lost easily.***
3) Remove aluminum, outer neck tube (354 to 507 models only).
4) Remove the trigger paddle and spring.
5) Disconnect micro-switch and install new one.
6) Reassemble the two handle sides onto the gooseneck/cable assembly. Be sure to watch for the following they all must be aligned for handle to be assembled correctly.
    a. Align neck wings with grooves in handle body.
    b. Align trigger assembly (this includes trigger, micro-switch with pins, and spring) in place into their mating sockets. ***IMPORTANT: Ensure the trigger wires are directed correctly to avoid pinching of wires.***
    c. At the rear of the handle align exhaust hose coupler with mating grooves.
    d. At the front of the handle align aluminum outer neck tube with mating pins in handle (354 to 507 models only).
7) Reinstall five handle screws. ***IMPORTANT: Ensure the trigger wires are not pinched between the handle halves.***
8) Reinstall the fume nozzle and fume controller.

POWER CABLE REPLACEMENT

1) Trim the end of the weld wire at contact tip.
2) Retract or completely remove welding wire so torch can be removed from the wire feeder.
3) Loosen the set screw at the torch feeder connection using a 5/64" Allen Wrench or remove the torch feeder connection cap.
4) Making sure the torch cable is straight, grasp the liner at the rear of the torch with a pair of pliers and remove from cable assembly.
5) Remove fume nozzle, fume controller, and the front-end consumables (i.e. nozzle, contact tip, gas diffuser, and insulating washer).
6) Remove the 5 handle screws and separate the handle assembly. ***CAUTION: Trigger spring is under compression and can be easily lost.***
7) Remove aluminum, outer neck tube (354 to 507 models only).
8) Remove trigger paddle, spring, and disconnect micro-switch.
9) Secure Gooseneck in a vice.
10) Using a wrench, loosen the gooseneck and remove from the cable assembly.
11) At the rear of the gun assembly, remove adaptor screw and slide adaptor support up cable to expose trigger control wires and disconnect them.
12) Secure the rear adaptor block in vice.
13) Using a wrench, loosen the power cable assembly from the adaptor block.
14) Remove the used power cable assembly from exhaust hose and replace it with new one.
15) Thread the rear adaptor block onto the new cable assembly and tighten.
16) Re-connect the rear trigger control wires to new power cable assembly using butt splices.
17) Slide rear adaptor support into adaptor block and secure with adaptor support screw.
18) At the front of assembly thread neck onto new power cable and tighten.
19) Reattach micro-switch to new power CONTROL LEADS USING BULLET CONNECTORS.
20) Reassemble the two handle sides onto the gooseneck/cable assembly. Be sure to watch for the following they all must be aligned for handle to be assembled correctly.
    a. Align neck wings with grooves in handle body.
    b. Align trigger assembly (this includes trigger, micro-switch with pins, and spring) in place into their mating sockets. ***IMPORTANT: Ensure the trigger wires are directed correctly to avoid pinching of wires.***
    c. At the rear of the handle align exhaust hose coupler with mating grooves.
    d. At the front of the handle align aluminum outer neck tube with mating pins in handle (354 to 507 models only).
21) Reinstall 5 handle screws. ***IMPORTANT: Ensure the trigger wires are not pinched between the handle halves.***
22) Carefully feed the liner back into the torch using short strokes to avoid kinking. You may need to twist the liner for easier insertion.
23) Tighten the set screw to secure the liner in the torch or replace the cap on the torch feeder connection.
24) Reinstall the torch to the wire feed unit.

25) **IMPORTANT:** at the front end of the torch push the liner back into the gun and hold it in place.

26) Trim the liner to ¾" stick out from the end of the gooseneck.

27) Reinstall the consumables as well as the fume nozzle and fume controller.

28) Feed welding wire into the torch and tighten drive rolls.

NOZZLE/TIP RELATIONSHIPS

Shown below are typical relationship between the contact tip and nozzle in GMAW Semi-Automatic applications. Nozzles to tip relationships are usually dictated by the process and application but not necessarily the standard. Keep in mind that decreased tip life, increased spatter cleaning cycles may be required if the tip relationship is changed to achieve other objectives.

Extended Tip – Short Circuit (Short Arc, Dip Transfer) Welding Applications

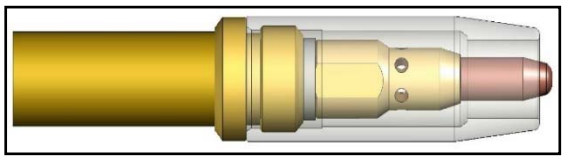

The tip stick out is usually 1/8" or 1/4" from the nozzle. Keep in mind that the further the stick out the more susceptible to gas porosity issues. Typically, this is used in short circuit, lower amperage applications, and/or where you may need to reach into a corner.

Flush Tip – Higher current Short Circuit (Short Arc, Dip Transfer) Welding Applications

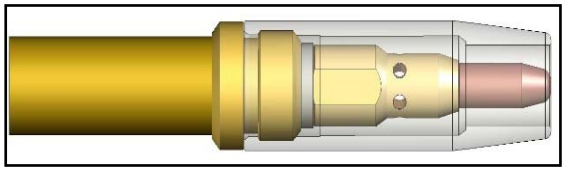

The tip is flush with the end of the nozzle. Typically used in higher current and voltage short circuit applications.

Recessed Tip – Spray Arc, Pulsed, Flux Core Welding Applications

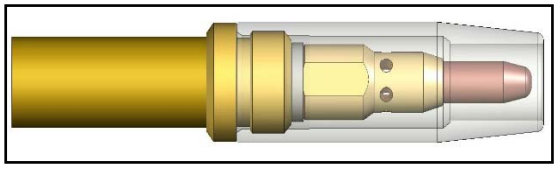

The tip is usually recessed in the nozzle 1/8" or 1/4". Usually, the higher the heat and/or current the further the recess. However, this is also dependent on the wire used and the arc length requirement.

NOZZLE SELECTION CHART

300 SERIES NOZZLES

(347SM SERIES)

Part Number	Description	Bore Size	Material	O.A.L	Insulator
75133801	CONICAL	3/8" (9.5mm)	NI PLATED BRASS	2.820" (71.6mm)	NONE REQ
75133802	BOTTLE NOSE	3/8" (9.5mm)	NI PLATED BRASS	2.820" (71.6mm)	NONE REQ
75133803	BOTTLE NOSE	3/8" (9.5mm)	NI PLATED BRASS	3.620" (91.9mm)	NONE REQ
75135004	SHORT CONICAL	1/2" (12.7mm)	NI PLATED BRASS	1.937" (49.2mm)	NONE REQ
75135002-I	TAPERED	1/2" (12.7mm)	NI PLATED BRASS	2.820" (71.6mm)	INSTALLED
75135003-I	TAPERED	1/2" (12.7mm)	NI PLATED BRASS	2.672" (68mm)	INSTALLED
75135601-I	CONICAL	9/16" (14.2mm)	NI PLATED BRASS	2.820" (71.6mm)	INSTALLED
75135602-I	CONICAL	9/16" (14.2mm)	NI PLATED BRASS	2.545" (64.6mm)	INSTALLED

400 SERIES NOZZLES

(354SM TO 500 SERIES)

Part Number	Description	Bore Size	Material	O.A.L	Insulator
75144301-I	TAPERED	7/16" (11.1mm)	NI PLATED BRASS	2.820" (71.6mm)	INSTALLED
75144302-I	TAPERED	7/16" (11.1mm)	NI PLATED BRASS	3.125" (79.4mm)	INSTALLED
75145001	BOTTLE NOSE	1/2" (12.7mm)	NI PLATED BRASS	3.031" (77.0mm)	75001733
75145002C	TAPERED	1/2" (12.7mm)	NI BARE COPPER	3.125" (79.4mm)	75001738
75145002CU	TAPERED	1/2" (12.7mm)	BARE COPPER	3.125" (79.4mm)	75001738
75145003	LONG TAPERED	1/2" (12.7mm)	NI PLATED BRASS	3.915" (99.4mm)	NONE REQ
75145004	BOTTLE NOSE	1/2" (12.7mm)	NI PLATED BRASS	3.125" (79.4mm)	75001733
75145005	BOTTLE NOSE	1/2" (12.7mm)	NI PLATED BRASS	2.820" (71.6mm)	75001733
75145601-I	TAPERED	9/16" (14.2mm)	NI PLATED BRASS	3.125" (79.4mm)	INSTALLED
75145602-I	SMALL CONICAL	9/16" (14.2mm)	NI PLATED BRASS	2.820" (71.6mm)	INSTALLED
75145603-I	SHORT TAPERED	9/16" (14.2mm)	NI PLATED BRASS	2.375" (60.3mm)	INSTALLED
75146202	CONICAL	5/8" (15.9mm)	NI PLATED BRASS	3.125" (79.4mm)	75001738
75146202C	CONICAL	5/8" (15.9mm)	NI PLATED COPPER	3.125" (79.4mm)	75001738
75146202CU	CONICAL	5/8" (15.9mm)	BARE COPPER	3.125" (79.4mm)	75001738
75146202-I	BOTTLE NOSE	5/8" (15.9mm)	NI PLATED BRASS	3.125" (79.4mm)	INSTALLED
75146204CU	CONICAL	5/8" (15.9mm)	BARE COPPER	2.820" (71.6mm)	75001738
75146204-I	CONICAL	5/8" (15.9mm)	NI PLATED BRASS	2.820" (71.6mm)	INSTALLED
75146205CU	TAPERED	5/8" (15.9mm)	BARE COPPER	3.031" (77.0mm)	75001738
75146205-I	CONICAL	5/8" (15.9mm)	NI PLATED BRASS	3.031" (77.0mm)	INSTALLED
75146206-I	SHORT CONICAL	5/8" (15.9mm)	NI PLATED BRASS	1.875" (47.6mm)	INSTALLED
75146207-I	SHORT CONICAL	5/8" (15.9mm)	NI PLATED BRASS	2.187" (55.6mm)	INSTALLED
75146501S	SPOT	5/8" (15.9mm)	NI PLATED BRASS	3.437" (87.3mm)	75001738
75147501	CYLINDRICAL	3/4" (19.0mm)	NI PLATED BRASS	3.125" (79.4mm)	75001738
75147501CU	CYLINDRICAL	3/4" (19.0mm)	BARE COPPER	3.125" (79.4mm)	75001738

500 SERIES NOZZLES

(507SM SERIES)

Part Number	Description	Bore Size	Material	O.A.L	Insulator
75157501	CYLINDRICAL	3/4" (19.0mm)	BARE COPPER	3.125" (79.4mm)	75001738
75157501-I	CYLINDRICAL	3/4" (19.0mm)	BARE COPPER	3.125" (79.4mm)	INSTALLED
75157001CU-I	CYLINDRICAL	3/4" (19.0mm)	BARE COPPER	3.125" (79.4mm)	INSTALLED
75156201-I	CONICAL	9/16" (14.2mm)	NI PLATED BRASS	2.820" (71.6mm)	INSTALLED

CONTACT TIP SELECTION CHART

M6 CONTACT TIPS

(347SM SERIES)

Part Number	Wire Size	Nominal I.D
Copper (CU)		
75023511	0.023" (.6mm)	0.034"
75030511	0.030" (.8mm)	0.038"
75035511	0.035" (.9mm)	0.044"
75040511	0.040" (1.0mm)	0.048"
75045511	0.045" (1.2mm)	0.054"

M8 CONTACT TIPS

(354SM-507SM SERIES)

Part Number	Wire Size	Nominal I.D
Copper (CU)		
75030014	0.030" (.8mm)	0.038"
75035014	0.035" (.9mm)	0.044"
75040014	0.040" (1.0mm)	0.048"
75045014	0.045" (1.2mm)	0.054"
75047014 (FOR ALUMINUM)	0.045" (1.2mm)	0.057"
75052014	0.052" (1.3mm)	0.061"
75062014	0.062" (1.6mm)	0.073"
75062015 (FOR ALUMINUM)	0.062" (1.6mm)	0.076"
75078014	0.078" (2.0mm)	0.087"
75093014	0.093" (2.4mm)	0.106"
Heat Resistant Technology (HRT) – Standard Length		
20030400	0.030" (.8mm)	0.039"
20035400	0.035" (.9mm)	0.041"
20040400	0.040" (1.0mm)	0.050"
20045400	0.045" (1.2mm)	0.054"
20052400TT	0.052" (1.3mm	0.057"
20062400	0.062" (1.6mm	0.069"
Heat Resistant Technology (HRT) – Short Length		
20030500	0.030" (.8mm)	0.039"
20035500	0.035" (.9mm)	0.041"
20040500	0.040" (1.0mm)	0.050"
20045500	0.045" (1.2mm)	0.054"

20052500	0.052” (1.3mm)	0.061”
20062500	0.062” (1.6mm)	0.069”

*TT is for tight tolerance.

LINER SELECTION CHART

(ALL SERIES AND FEEDER PINS)

Part Number	Description
For Steel Wire Applications	
75005215T	0.023-0.030 STEEL LINER, 5FT
75010215T	0.023-0.030 STEEL LINER, 10FT
75015215T	0.023-0.030 STEEL LINER, 15FT
75001222T	0.035-0.045 STEEL LINER, 1FT
75005222T	0.035-0.045 STEEL LINER, 5FT
75010222T	0.035-0.045 STEEL LINER, 10FT
75015222T	0.035-0.045 STEEL LINER, 15FT
75025222T	0.035-0.045 STEEL LINER, 25FT
75001228T	0.045-1/16 STEEL LINER, 1FT
75005228T	0.045-1/16 STEEL LINER, 5FT
75010228T	0.045-1/16 STEEL LINER, 10FT
75015228T	0.045-1/16 STEEL LINER, 15FT
75025228T	0.045-1/16 STEEL LINER, 25FT
75001229T	5/64-3/32 STEEL LINER, 1FT
75005229T	5/64-3/32 STEEL LINER, 5FT
75010229T	5/64-3/32 STEEL LINER, 10FT
75015229T	5/64-3/32 STEEL LINER, 15FT
75025229T	5/64-3/32 STEEL LINER, 25FT
For Aluminum Wire Applications	
75005320T-J	0.035-0.045 TEFLON LINER, 5FT
75010320T-J	0.035-0.045 TEFLON LINER, 10FT
75005324T-J	0.045-1/16 NYLON LINER, 5FT
75010324T-J	0.045-1/16 NYLON LINER, 10FT
75015324T-J	0.045-1/16 NYLON LINER, 15FT

PARTS BREAKDOWN

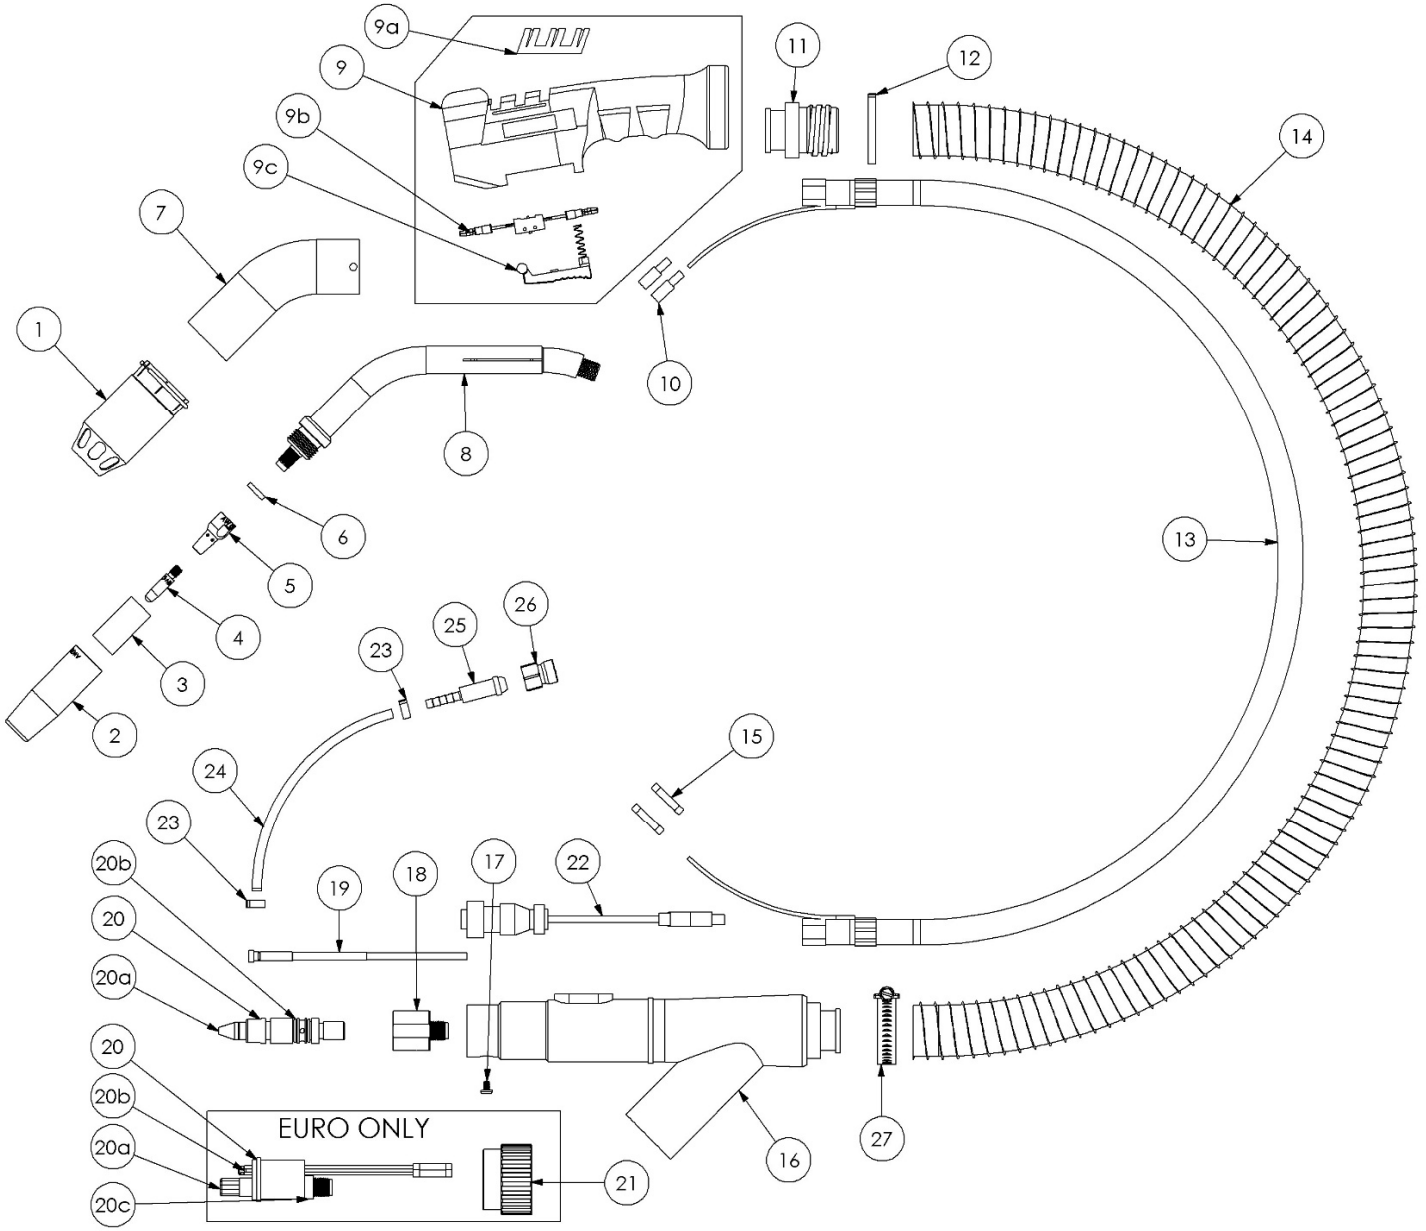

NO.	Description	347	354	407	500	507
1	FUME NOZZLE	75057001	75057024			
2	NOZZLE	SEE NOZZLE SELECTION CHART				
3	NOZZLE INSULATOR	SEE NOZZLE SELECTION CHART				
4	CONTACT TIP	SEE CONTACT TIP SELECTION CHART				
5	GAS DIFFUSER, STANDARD	75002007	75004033			
	GAS DIFFUSER, SHORT	75002007S	75004033S			
	GAS DIFFUSER, LONG	75002007L	75004033L			
	GAS DIFFUSER, X-LONG	75002007XL	75004033XL			
6	INSULATING WASHER	75001005	75001004			75001006
7	OUTER NECK TUBE	N/A	75057052			
8	GOOSENECK	75057003	75057004			75057018
9	HANDLE ASSEMBLY	75057002	75057025			
9a	FUME CONTROLLER	75057010 (included in Handle Assembly)				
9b	MICRO-SWITCH	75057012 (included in Handle Assembly)				
9c	TRIGGER	75057011 (included in Handle Assembly)				
9d	TRIGGER SPRING	75057013 (included in Handle Assembly)				
NS	HANDLE SCREW	75057016 (included in Handle Assembly)				
	FEMALE BULLET CONNECTOR	38077003				
11	EXHAUST HOSE CONNECT	75057007	75057021			
12	FRONT EXHAUST HOSE CLAMP	75057014				
13	10’ POWER CABLE	75010307	75010407		75010507	
	12’ POWER CABLE	75012307	75012407		75012507	
	15’ POWER CABLE	75015307	75015407		75015507	
	20’ POWER CABLE	75020307	75020407		75020507	
	25’ POWER CABLE	75025307	75025407		75025507	
14	EXHAUST HOSE (PER FOOT)	75099657	75099700			
NS	3’ LEATHER COVER	75099656	75099664			
15	BUTT SPLICE	75077066				
16	ADAPTOR SUPPORT	75057009	75057019			
17	ADAPTOR SCREW	75077011				
18	DIRECT CONNECT ADAPTOR BLOCK		37077000		37077000	
19	LINER	SEE LINER SELECTION CHART				
20	EURO FEEDER BLOCK	75001148 (INCLUDES ALL #20 PARTS & #18 PART)				
	FRONIUS FSC FEEDER BLOCK	37677710 (INCLUDES ALL #20 PARTS & #18 PART)				
	LINCOLN LN7 FEEDER PIN	37577832				
	MILLER FEEDER PIN	37577705 (INCLUDES ALL #20 PARTS)				
	OTC/DAIHEN D SERIES FEEDER PIN	37577700 (INCLUDES ALL #20 PARTS)				
	OTC DP SERIES FEEDER PIN	37577701 (INCLUDES ALL #20 PARTS)				
	PANASONIC FEEDER PIN	37577999				
	TWECO #4 FEEDER PIN	37577699 (INCLUDES ALL #20 PARTS)				
	TWECO #5 FEEDER PIN	37577930 (INCLUDES ALL #20 PARTS)				
20a	CAP – EURO FEEDER BLOCK	37077005				
	CAP - MILLER FEEDER PIN	37577705-N				
	CAP - OTC D AND DP FEEDER PIN	38277001-N078				
20b	O-RING – EURO BLOCK	28500002				
	O-RING – FRONIUS BLOCK	75000057				
	O-RING - MILLER PIN	37577102				
	O-RING - TWECO #4 PIN	37677102				
	O-RING - TWECO #5 PIN	75000021				
20c	EURO FEEDER BLOCK ADAPTOR	75001151 (EURO FEEDER BLOCK ONLY)				
21	EURO ADAPT NUT	75077014				
22	CONTROL CABLE - LINCOLN	37777200				
	CONTROL CABLE - MILLER	37777501 ([2] 75077066 BUTT SPLICES REQ’D)				

	CONTROL CABLE – OTC D AND DP	37777503 ([2] 75077066 BUTT SPLICES REQ'D)
	CONTROL CABLE – PANASONIC	37777504 ([2] 75077066 BUTT SPLICES REQ'D)
	CONTROL CABLE – TWECO #4 & #5	37777500 ([2] 75077066 BUTT SPLICES REQ'D)
23	7/16" GAS HOSE CLAMP	38577108
24	GAS HOSE (PER FOOT)	38577087
25	9/16" NIPPLE (TYPE B)	38677144
	2-7/32" NIPPLE (TYPE A)	38677141
26	9/16-18 RH NUT (GAS; TYPE B)	38677144
	5/8-18 RH NUT (GAS; TYPE A)	38677142
27	REAR EXHAUST HOSE CLAMP	75057014A

- Type A = Lincoln
- Type B = OTC / Panasonic

APPENDIX

A-1 EURO FEEDER PIN

Before January 2024
No longer Available

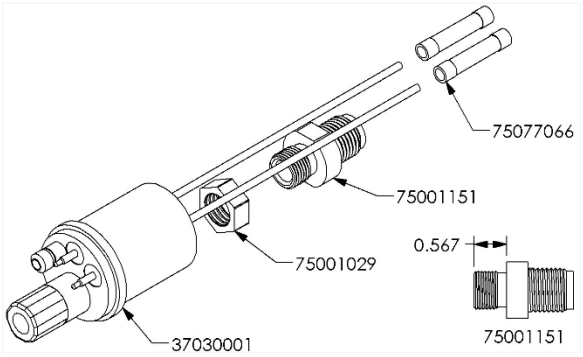

January 2024 and after
P/N 75001148

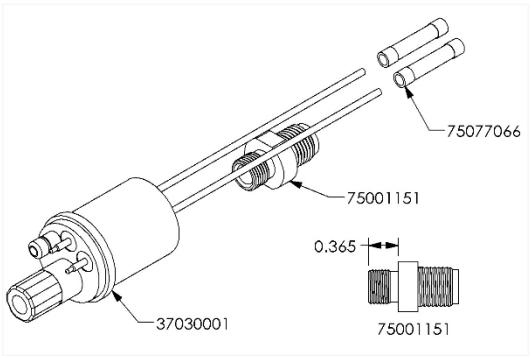

If 75001151 length is 0.567” long, P/N 75001029 is still needed and is still available.

NOTES

AMERICAN WELDQUIP

1375 Wolf Creek Trail – P.O. Box 397

Sharon Center, Ohio 44274

Telephone 330-239-0317

Fax 800-949-9353

www.weldquip.com

www.youtube.com/weldquip1

WORKING TO REDUCE OUR ENVIRONMENTAL IMPACT ON THE WORLD

OM003 – 03/25